



HP Chromebook 14 Screen Replacement

Easy and quick replacement of the Chromebook screen.

Written By: Ricky



INTRODUCTION

Easy and quick replacement of the Chromebook screen.



TOOLS:


- [Phillips #2 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Screen



- We will be replacing the screen on this HP Chromebook. ***Unfortunately I did get a shot of the sweet crack on this screen.
- We will start by removing this screws on the bottom left and right of the screen, just above the escape key and power button.

Step 2

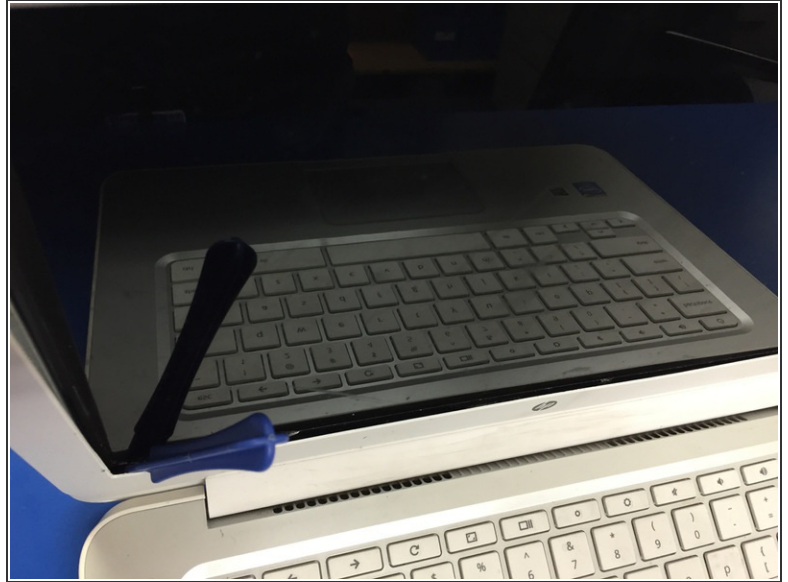


- Next will start to remove the front "bezel" with a simple spudger. It is best to start from the bottom (now we here) of the screen. *couldn't resist
- ⓘ The bottom will have adhesive/double sided tape that may or may not give you trouble. It is not enough to prevent you from removing the screen, just be aware as it is near the screen circuit board.

Step 3



- Once removed, we can proceed to remove (4) screws that hold the screen to the laptop case.
 - Marked in blue are the locations for the screws. Screws are closest to screen and on a *light* silver bracket. Pull screen forward and lay down on keyboard.

Step 4

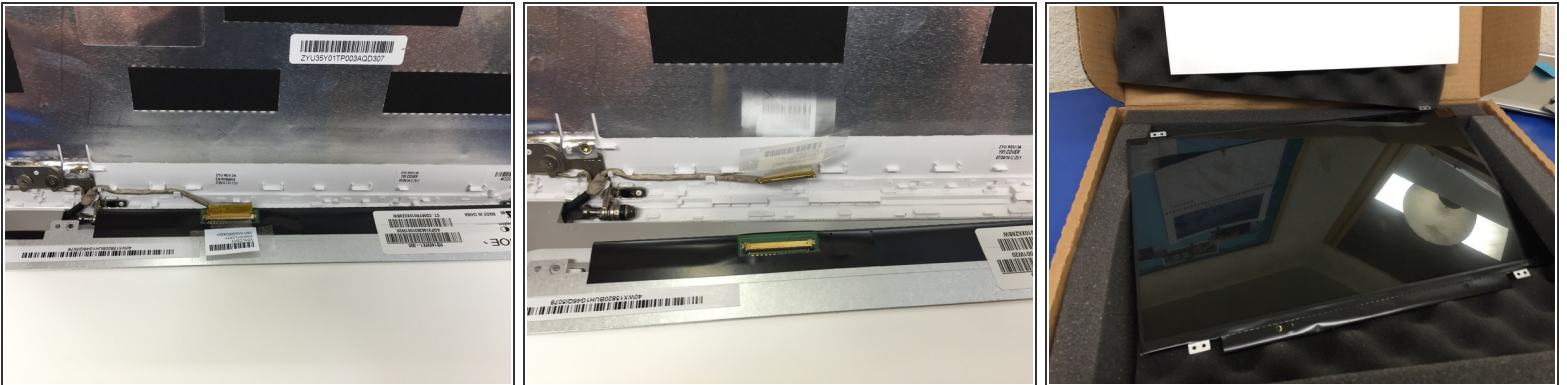

- The ribbon cable is connected at the bottom of the screen. Tape is placed over the connection and it is easily peeled and easy to reuse. I would not advise cutting the tape.
- Connect your new screen and go backwards through the steps to install.

Step 5



i When re-installed and laptop is closed, check the back hinge area as it does not easily *snap* back in together. Pat yourself on the back if you can get it all together perfectly!

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 10:15:46 AM.